# **FUSES & CIRCUIT BREAKERS**

1994 Volvo 960

Fuses & Circuit Breakers 1992-94 Volvo

960 Series


## **IDENTIFICATION**

### FUSE PANEL LOCATION

The fuse panel is located on the left side of the instrument panel. To gain access to the panel, remove the cover plate.

#### INTERIOR FUSE PANEL IDENTIFICATION (1992-94)

NOTE: The ABS System is protected by an additional 10 Amp fuse which is located under the instrument panel to the left of the steering wheel.

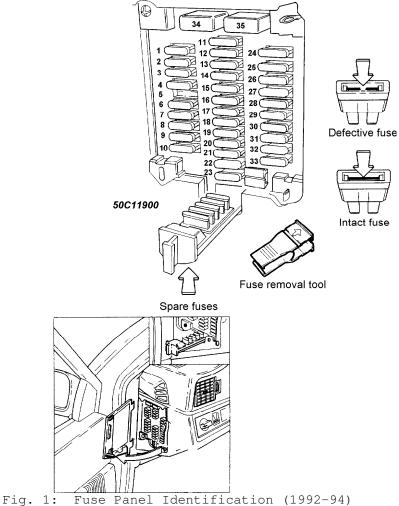

Courtesy of Volvo Cars of North America.

\* 1 - 10 Amp

Left & Rear Parking Lights, License Plate Lights \* 2 - 10 Amp Right Parking Lights 3 - 15 Amp Left Headlight (High Beam) 4 - 15 Amp Right Headlight (High Beam) 5 - SRS Test Socket 6 - 15 Amp Left Headlight (Low Beam) 7 - 15 Amp Right Headlight (Low Beam) 8 - 15 Amp Front Foglights 9 - 10 Amp \* Rear Foglights 10 - 5 Amp Instrument/Panel Lights 11 - 15 Amp Back-up Lights, Turn Signals, Cruise Control 12 - 15 Amp Shift-Lock 13 - 25 Amp Heated Rear Window, Heated Door Mirrors 14 - 10 Amp Overdrive, Sunroof, Power Window Relays, Heated Seats, Seat Belt Reminder 15 - Not Used 16 - 30 Amp Heated Seats 17 - Not Used 18 - 5 Amp Radio/Cassette Tape Player 19 - 15 Amp (1992) ECC, Power Door Mirrors, Rear Washer/Wiper (Wagon), Power Seats, Cigar Lighter 19 - 15 Amp (1993) ECC, Power Door Mirrors, Rear Washer/Wiper (Wagon), Power Seats, Cigar Lighter, Ambient Air Temperature Sensor 20 - 25 Amp Windshield Wipers/Washers, Horn 21 - 5 Amp (1992) Transmission Mode Selectors, Diagnostic Socket, Cooling Fan, EGR Valve 21 - 5 Amp (1993) Transmission Mode Selectors 22 - 5 Amp ABS 23 - 10 Amp Transmission Control 24 - 10 Amp Transmission/Engine Controls 25 - 25 Amp Hazard Warning Flashers, Central Locking System 26 - 10 Amp Clock, Interior Lights, Door Open Warning Lights, Cargo Space & Vanity Mirror Lights 27 - 15 Amp Brake Lights, Shift-Lock Release 28 - 30 Amp ECC, Air Conditioning 29 - 30 Amp Power Antenna, Electrical Connector For Trailer

- \* 30 10 Amp Fuel Pump (In-Tank) Electrically Heated Lambda-
- Fuel Pump (In-Tank), Electrically Heated Lambda-Sond 31 25 Amp
- Fuel Injection, Main Fuel Pump, Ignition
- \* 32 10<sup>°</sup>Amp Radio/Amplifier (If Equipped)
- \* 33 10 Amp
- Radio/Cassette Tape Player
- \* 34 30 Amp (Circuit Breaker)
- Power Windows, Power Sunroof \* 35 - 30 Amp (Circuit Breaker)
- Power Seats

## **RELAY PANEL LOCATION (1992-94)**

The relay panel is located in the center of the instrument panel. To gain access to the panel, remove the ash tray.

# **INTERIOR RELAY PANEL IDENTIFICATION (1992-94)**

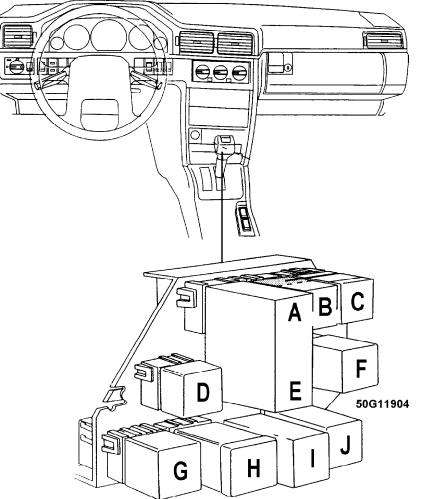


Fig. 2: Relay Panel Identification (1992-94) Courtesy of Volvo Cars of North America.

- \* A Headlight Relay with Bulb Malfunction Indicator
- \* B Fuel Injection Relay, Fuel Pump Relay

- \* C Central Locking Relay
  \* D Foglight Relay
  \* E Headlight Relay with Bulb Malfunction Indicator
  \* F Overdrive Relay
  \* G Bypass Relay 151
  \* H Intermittent Wiper Relay (Rear Tailgate Wagon)
  \* I Intermittent Windshield Wiper Relay
  \* J Seat Belt Reminder Relay